

VERSION
3.0

LAN NETWORK QUICK START GUIDE



Plant Connect

Production Data Anywhere

Belt-Way Scales Inc.
102 East Daugherty St.
Webb City, MO 64870
Phone: (800) 441-4237
sales@beltwayscales.com
www.beltwayscales.com

1. Introduction

The Plant Connect system allows the user to remotely monitor Belt-Way conveyor belt scales over the Internet. The Belt-Way integrator can be connected to any internet connection. The customer must provide appropriate Cat5e cable, network switches, Wifi transmitters, or other hardware required to add integrators to a network.

2. Check Integrator Firmware Version PLANT CONNECT WON'T WORK WITHOUT CORRECT INTEGRATOR FIRMWARE!

A. Press the **Menu** button. Choose **Totals & Diag.**

B. Press the **Menu** button. Choose **Totals & Diag.**

C. Check **Integrator Board Firmware Version**



A new version of Plant Connect was released in January 2019 that requires integrator firmware version 6.43 or greater. Existing integrators running firmware versions 3.XX, 4.XX, or 5.XX must have a new integrator board installed or be returned to Belt-Way for manual upgrade. Contact Belt-Way prior to installation if a firmware update is required!

LAN Network Quick Start Guide

3. Connect Cat5e ethernet cable to integrator


Route the cable through the cord connector directly below the Ethernet port. Split the rubber grommet to allow the RJ-45 connector to fit through the hole. Plug the cable into the integrator ethernet port.

Only install the POE fuse if you are powering a Wifi transmitter!




4. Network Examples

Wireless Network:

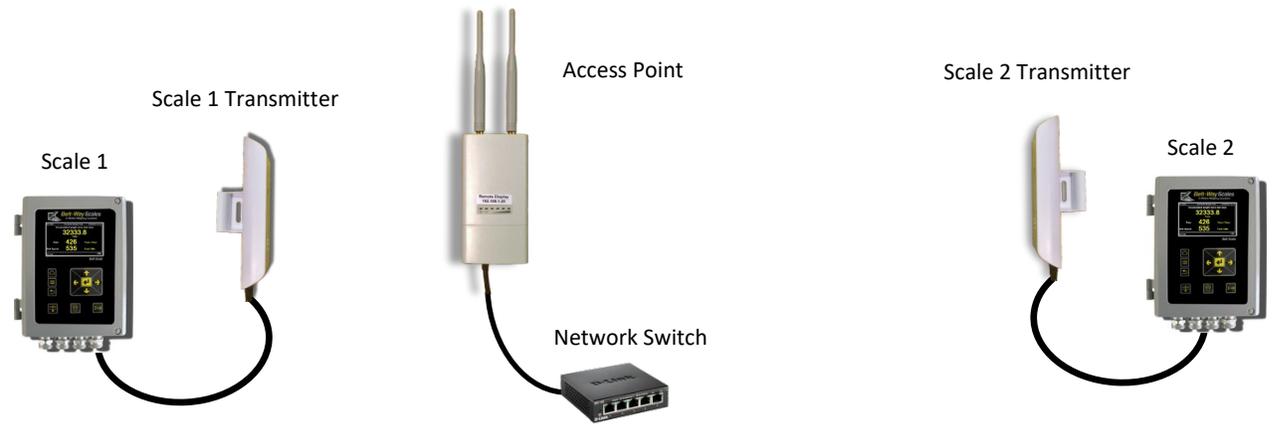



Hardwire Network:

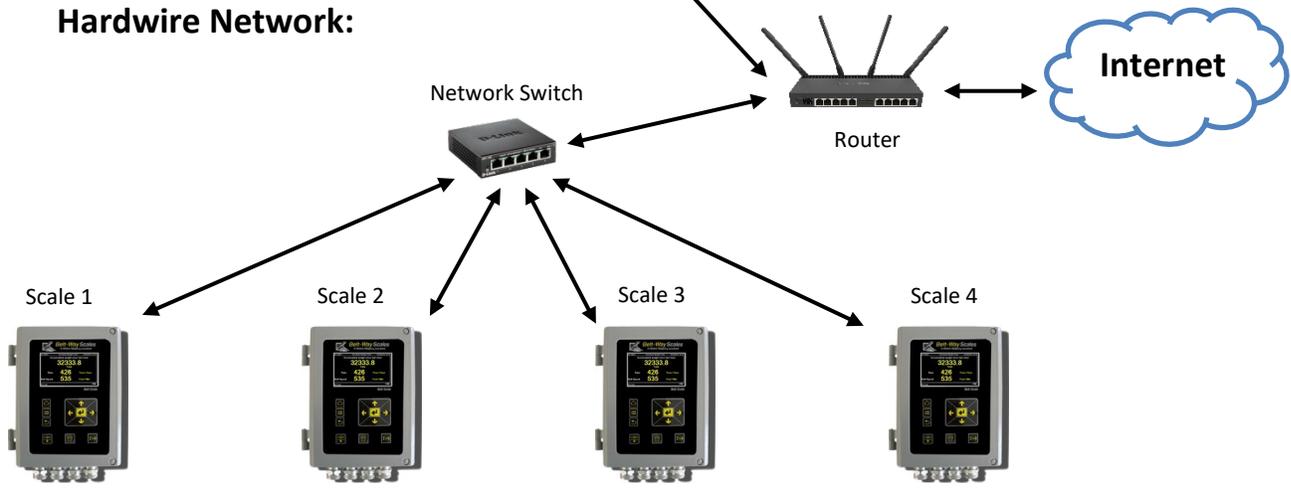

LAN Network Quick Start Guide

5. Record MAC Address and contact Belt-Way tech support.


- A. Press the **MENU** Button and choose **Administration**
- B. Choose **Ethernet**
- C. Arrow down to the MAC address and write it down.
- D. Contact Belt-Way tech support and supply MAC addresses for all integrators.
You will also be issued a unique CUSTOMER ID.

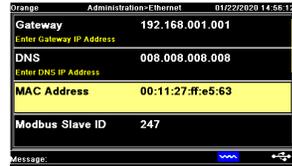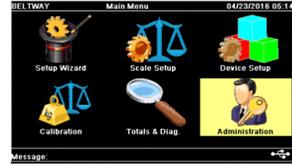


6. Configure Integrator IP addresses

*** A network administrator must oversee the process of adding new devices to your network! ***

- A. **Option 1:**
Enable DHCP to have the network router assign an IP address to each integrator.

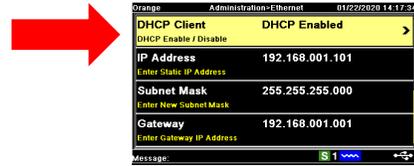

- B. **Option 2:**
Disable DHCP and assign an unused Static IP address.

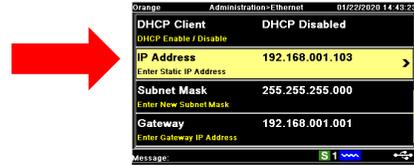


LAN Network Quick Start Guide

7. Enable Plant Connect


- A. Press the **Menu** button. Choose **Device Setup**.
- B. Next choose **Plant Connect**.
- C. Enter the **CUSTOMER ID** supplied by Belt-Way tech support.



- C. Enter the **CUSTOMER ID** supplied by Belt-Way tech support.

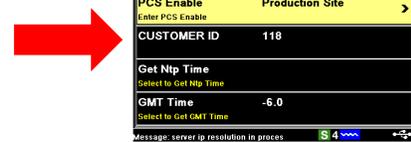


- D. Enable daylight saving (**DST**) to automatically adjust the integrator time for daylight savings. Change **GMT Time** to the local time zone.
 - 5 = Eastern Time
 - 6 = Central Time
 - 7 = Mountatin Time
 - 8 = Pacific Time
 - 9 = Alaska Time
 - 10= Hawaii Time

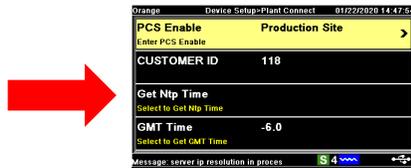

- E. Change **PCM Connection** to **LAN**.



- F. Change **PCS Enable** setting to **Production Site**.
The integrator will now attempt to access the Internet
And connect to the Plant Connect server. This usually takes
a few minutes. The message line shows the current activity
and the status icons will change from **S1 through S4**.
The **WIFI** icon will appear when the connection is successful.

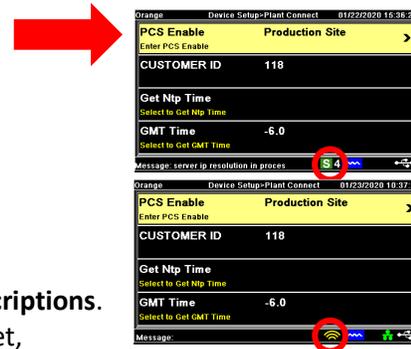

A full explanation of the icons can be found under **ICON Descriptions**.
If the integrator does not immediately connect to the internet,
change the DNS ip address from 8.8.8.8 to whatever is used by the router.

8. Login to Website

The preferred web browser is Google Chrome. Navigate to the following address:

<https://plantconnect.beltwayscales.com>

Enter your username and password and click **Login** and Refer to the

Plant Connect Website Quick Start Guide for more information about Plant Connect features.

Contact Belt-way if you have other questions.