

BWINT Scoreboard Display Output

Setup:

Menu->Device Setup->ScoreBoard Display->

-> **Displayed Data:** Select what you want to show on the display
Weight, Rate, or Alternate.

Alternate requires a Time Delay in seconds

-> **SB Display Type Belt-Way:** Fixed at 9600 baud, 8 data bits, 1 stop bit

SB Display Type Custom: Following settings are configurable.

9600,19200, 57600, 115200 baud

7,8 data bits

0,1 stop bits

-> **Terminal Mode:** Set to **OFF**

(Set On for PC based Software like HyperTerminal)

> Wiring:

The bottom 2-pin terminal in the left column on the terminal board.

Wire SCR_BRD_TXD from the scale to 232 RXD in the display.

Wire GND from the scale to GND in the display

(must use the GND on the same 2 pin terminal with SCR_BRD_TXD
due to isolation)

> Data Stream

It is all ASCII text and the decimal position is fixed. The message updates multiple times per second.


The "s" indicates a space used below to illustrate the message as the value increases

```
-sssssss1.000  
-sssssss.000  
sssssss.000  
sssssss1.000  
sssssss10.000  
ssssss100.000  
sssss1000.000  
ssss10000.000  
sss100000.000  
ss1000000.000  
s10000000.000
```


Followed by a CR

> Examples:

Rate only

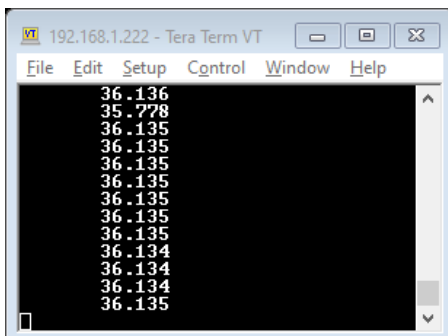

Weight only

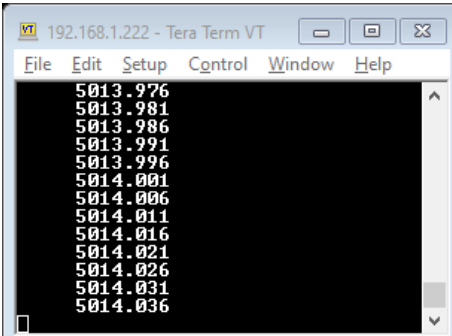

Alternate with 2 sec Time Delay

