


1. Route the gray data cable through an available hole in one of the aluminum cord connectors.
2. Wrap the shield wire around the rubber grommet so it makes contact with the aluminum housing when the cap is tightened down. This grounds the shield to prevent electrical noise from entering the control box.
3. Connect the Green Wire to the SCR BRD TXT and the White Wire to the GND terminal.

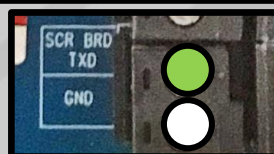

**Green Wire - SCR BRD TXT**



**White Wire - GND**

4. Power up the scale and scoreboard display.


5. Press the Menu button and navigate to **Device Setup**




6. Choose the **Scoreboard Display** option



7. SB Display Type should be Belt-Way. Select the **Displayed Data** option.

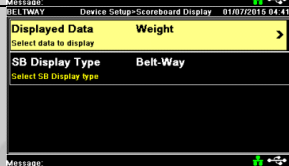

8. Choose **Rate, Weight, or Alternate Wt and Rate**. If Alternate is chosen, select the time delay between the Rate and Weight messages.

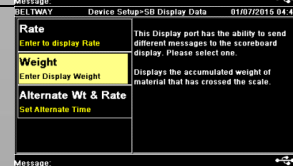

9. Press the Home button to return to the run screen.  
The scoreboard should now show the correct information.